





CHRIS HAMANN AND NANCY SHAW

ASSEMBLY INSTRUCTIONS


- 1** Cut out the entire white panel (a). Cut along line between parts A and B (b), then remove excess (c).
- 2** Fold part A along the dotted lines.
- 3** Slip part B into the folded part A.
- 4** To make the cursor (the sliding window that is inscribed with a hairline), use the guides to the left to measure two pieces of transparent tape. Make one section the length of the black line and the other the length of the red line. Place the adhesive sides together.




- 5** Draw a line with a fine marker in the middle.

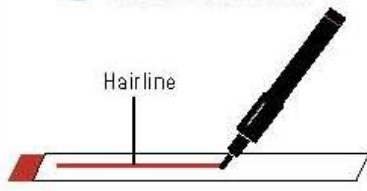


- 6** Wrap the folded tape around the slide rule for sizing. Use the adhesive end to complete the cursor. Slide cursor onto the rule.

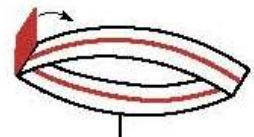

Part A

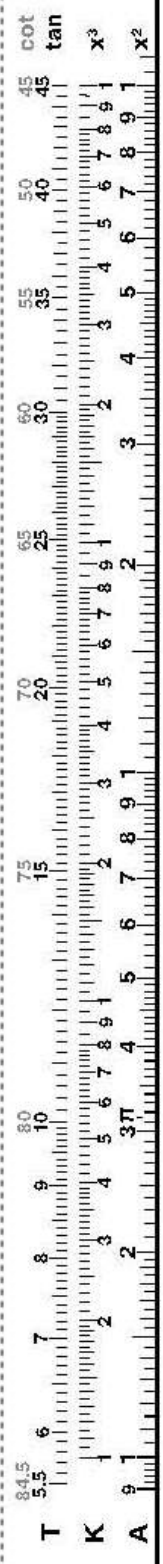

b Cut here

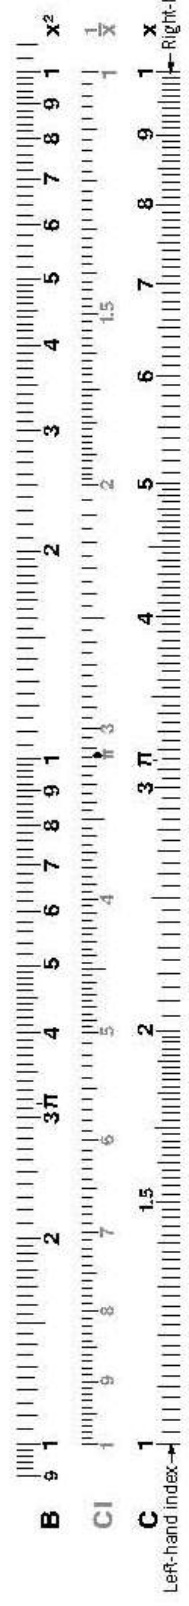

Part B
(Slider)